GETTING TO KNOW YOUR CURLING WAND

Tourmaline

Barrel

Counter

Rest

Professiona

Swivel Line Cord

Ceramic-Coated

5 Ultra-High

Heat Levels

Temperature

Cool Tip

Uniform Heat

Recovery System

30-Second

Instant Heat

Auto Off

Heat Protective

Glove for Left Hand

o visitenos en: www.conair.com o Infiniti by Conair", llame al 1-800-3-CONAIR Para más información sobre los productos Conair

> ©2011 Conair Corporation Glendale, A285307 7475 N. Glen Harbor Blvd Service Department Conair Corporation

CENTRO DE SERVICIO

www.conair.com/registration Para registrar su producto, visitenos en:

varian de un Estado a otro. citicos y usted puede tener otros derechos que Esta garantía le otorga derechos legales espe-

bnegen no regir para usted. ez' qe moqo dne jas jimitaciones mencionadas de daños especiales, incidentales o consecuent-Estados no permiten la exclusión o limitación GARANTIA, EXPRESA O IMPLICITA. Algunos PLIMIENTO DE ESTA O CUALQUIER OTRA DENTAL O CONSECUENTE DEBIDO AL INCUM-CASO, POR NINGUN DANO ESPECIAL, INCI-CONAIR NO SERA RESPONSABLE, EN NINGUN

mencionadas pueden no regir para usted. nus garantia implicita, de modo que las limitaciones no permiten limitaciones sobre la duración de SENTE GARANTÍA ESCRITA. Algunos Estados LIMITADAS POR LOS 60 MESES DE LA PRE-PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN PLICITA DE COMERCIABILIDAD Y APTITUD PERO NO LIMITADAS A LA GARANTÍA IM-SPONSABILIDAD IMPLICITAS, INCLUYENDO CUALQUIER GARANTÍA, OBLIGACIÓN O RE-


meses a partir de la fecha de fabricación. de compra, el periodo de garantia será de 60 instrucciones de envío. En ausencia del recibo deben Ilamar al 1-800-3-CONAIR para recibir zojo uecesiran dar una prueba de compra y de manejo y envío. Los residentes de California un cheque o giro postal de US\$7.00 por gastos csdo al dorso, junto con su recibo de compra y regrese su aparato al Centro de Servicio indi-Para obtener servicio tecnico bajo esta garantia,

detectos de materiales o tabricación. s partir de la fecha de compra si presentara sbarato sin cargo por un periodo de 60 meses Conair reparará o remplazará (a su opción) su

GARANTIA LIMITADA DE CINCO ANOS

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF,

KEEP AWAY FROM WATER

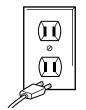


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG

LOS APARATOS PEQUENOS SIEMPRE DESENCHUE

eléctricos después de usarlos. tanto, siempre desenchute los aparatos Si està conectado, hay corriente. Por lo ece palo reusion annque este apagado? nated due un aparato electrico permanclar la electricidad y el agua. Pero ¿Sabe -zam adab as on aup somadas soboī

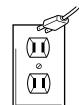

DEL AGUA MANTENGALO ALEJADO

APAGADO, ESTÁ ESTÁ EQUIVOCADO **ĀŢS** OTARAYA JE CORRIENTE CUANDO SI CREE QUE NO HAY **ADVERTENCIA:**

LIMITED FIVE YEAR WARRANTY

Conair will repair or replace (at our option) your

unit free of charge for 60 months from the date

of purchase if the appliance is defective in work-

To obtain service under this warranty, return

the defective product to the service center

listed on back, together with your purchase

receipt and \$7.00 for postage and handling.

California residents need only provide proof of

purchase and should call 1-800-3-CONAIR for

shipping instructions. In the absence of a purchase

receipt, the warranty period shall be 60 months

ANY IMPLIED WARRANTIES, OBLIGATIONS,

OR LIABILITIES, INCLUDING BUT NOT LIMITED

TO THE IMPLIED WARRANTY OF MERCHANT-

ABILITY AND FITNESS FOR A PARTICULAR

PURPOSE, SHALL BE LIMITED IN DURATION

TO THE 60-MONTH DURATION OF THIS WRIT-

TEN, LIMITED WARRANTY. Some states do not

allow limitations on how long an implied war-

ranty lasts, so the above limitations may not

IN NO EVENT SHALL CONAIR BE LIABLE FOR

ANY SPECIAL, INCIDENTAL, OR CONSEQUEN-

TIAL DAMAGES FOR BREACH OF THIS OR ANY

OTHER WARRANTY, EXPRESS OR IMPLIED,

WHATSOEVER. Some states do not allow the

exclusion or limitation of special, incidental, or

consequential damages, so the above limitation

This warranty gives you specific legal rights,

and you may also have other rights, which vary

from the date of manufacture.

apply to you.

may not apply to you.

from state to state.

manship or materials.

INSTRUCCIONES DE


dne lo conecta al aparato este suelta y recta. to. Permita que el cable cuelgue o que la junta enchute. No enrolle el cable alrededor del aparaniños. No tironee ni retuerza el cable al nivel del lugar seco y seguro, tuera del alcance de los macenar. Permita que entrie y guardelo en un Cuando no lo utiliza, su aparato es facil de al-**ALMACENAJE** manera intermitente.

el aparato dejara de funcionar o funcionara de inmediatamente si el cable parece dañado o si de due no esté dañado. Deje de usar el aparato Kevise el cable con trecuencia para asegurarse al aparato, produciendo su ruptura o un cortocircuito. Esto podria dañar la junta flexible que lo conecta Munca lo enrolle con tuerza alrededor del aparato. NUNCA jale, retuerza ni doble mucho el cable.

PRECAUCION

de servicio autorizado. No trate de repararlo. aparato, permita que enfríe y regréselo a un centro eu caso de mai tuncionamiento, desconecte ei g snbellicie exteliol con un bano humedecido. (impiario, desenchutelo, permita que entrie y limpie libres de polvos y pelusas. Cuando sea necesario necesita lubricación. Mantenga todas las aberturas Su aparato requiere poco mantenimiento. No

OTN3IMIN3TNAM

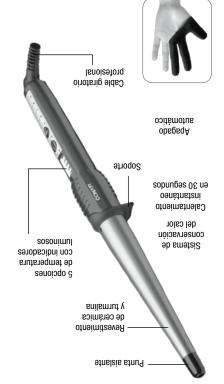

bara ia mano izquierda

Guante" aislante

SU RIZADOR FAMILIARICESE CON



Please register this product at: www.conair.com/registration

SERVICE CENTER

CONAIR CORPORATION Service Department 7475 N. Glen Harbor Blvd Glendale, AZ 85307 ©2011 Conair Corporation

For info on any Conair or Infiniti by Conair product, call: 1-800-3-CONAIR or visit us on the web at: www.conair.com

USER MAINTENANCE

Your curling wand is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance. causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not ierk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

YOU'RE WRONG.

SMALL APPLIANCES

SISTEMA DE CONSERVACION DEL CALOR

perfecta para rizar su cabello fácil y rápida-

principio. Con práctica, encontrara la manera

bello. Será necesario experimentar un poco al

Repita el proceso con cada sección de ca-

más gruesas. Permita que el cabello enfrie an-

odiener ondas mas sueitas, enrolle secciones

divida el cabello en secciones más finas. Para

rápidamente. Para obtener rizos más apretados,

bre obtendrá hermosos resultados, fácil y

inego desenrolle delicadamente el cabello. Siem-2 s 8 segundos (segun el tipo de cabello), y

Sostenga el cabello por las puntas durante

euloile el cabello airededor del tubo hacia la

S Empezando a 2 pulgadas (5 cm) de la raiz,

4. Never operate this appliance if it has a

damaged cord or plug, if it is not working

properly or if it has been dropped or damaged,

or dropped into water. Return the appliance

to an authorized service center for ex-

5. Keep the cord away from heated surfaces.

Do not pull, twist, or wrap line cord around

7. Never drop or insert any object into any

8. Do not use outdoors or operate where aero-

sol (spray) products are being used or where

9. Unit is hot when in use. Do not let heated

10. Do not place the heated unit directly on

11. Never block the air openings of the appli-

ance or place on a soft surface such as a bed

or couch, where the air openings may be blocked.

Keep the air openings free of lint and other

12. Do not use an extension cord with this ap-

13. Do not touch hot surfaces of the appliance.

14. Do not attempt to touch the housing of your

appliance near the barrel, as it is hot when

15. Do not use with a voltage converter

any surface while it is hot or plugged in.

amination and repair.

6. Never use while sleeping.

oxygen is being administered.

surface touch eyes or skin.

Use handles or knobs.

appliance.

tes de peinario para "fijar" los rizos.

extremidad.

obtener los resultados deseados, sin lastimar el más fino hasta el más grueso, y siempre beratura perfecta para su tipo de cabello, desde was grueso, para permitirle escoger la teman fipo de cabello, desde el más fino hasta el bermitirle escoger la temperatura perfecta para Cuenta con 5 opciones de temperatura para

durante el uso.

muy rápido y mantiene la temperatura constante encia de cerámica que logra un calentamiento Su rizador está dotado de una potente resist-

5 OPCIONES DE TEMPERATURA CALENTAMIENTO INSTANTÈNEO &

se sbadara automáticamente después de de encenderlo. Para su seguridad, el aparato Nunca deje el aparato desatendido después

el tubo caliente puede causar molestias. protección duradera. El contacto prolongado con no ha sido diseñado para proporcionar una Sin embargo, tenga presente que este "guante"

broteger su mano al enrollar el cabello alrededor Incluimos un "guante" termo-resistente para

HINPORTANTE

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the

READ ALL INSTRUCTIONS **BEFORE USING** KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

- 1. Always unplug appliance immediately after using.
- 2. Do not use while bathing or in the shower.
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 4. Do not place in, or drop into, water or other
- 5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

- 1. This appliance should never be left unattended when plugged in.
- 2. This appliance should not be used by, on or near children or individuals with certain
- 3. Use this appliance only for its intended use. as described in this manual. Do not use attachments not recommended by the manu-

(x.5 cm). Divida el cabello en secciones de 1 pulgada

locion fijadora ligera sobre el cabello antes de Para lograr resultados óptimos, aplique una

DEL RIZADO **FUNDAMENTOS**



Cabello resistente	xsM\otlA (7° 004–08E)
Cabello grueso u ondulado	(3° 086) otlA-oib9M
Cabello normal, espeso o tratado	(3° 01°) (The off)
Cabello delicado, fino o dócil	Encendido/Bajo (285 °F)
TIPO DE CABELLO	AAUTAAAMAT AG ATSULA

Guia de temperatura

temperatura según su tipo de cabello! nivel de temperatura alto. ¡Personalice la o resistente, le recomendamos que utilice un pajo: Zi an capello es esbeso, grueso, ondulado recomendamos que utilice un nivel de temperatura rápidamente. Si su cabello es fino, le para todo tipo de cabello, y calienta muy Fate aparato offece 5 opciones de temperatura,

OPERATING INSTRUCTIONS

This curling wand is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 120V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

la piel después de encender el aparato. ente en segundos. Evite todo contacto con ADVERTENCIA: El tubo se volverá muy cali-

el aparato caliente durante 30 segundos. dido/bajo (285 °F) se encenderá. Permita que aparato. Encienda el aparato. La luz de encen-El cabello debe estar limpio y seco. Enchufe el

FUNCIONAMIENTO BÁSICO

seguridad. No intente ir en contra de esta funcion de completamente, comuniquese con un electricista. de corriente, invièrtela. Si aún no entrara corriente polarizada. Si no entrara en la toma eucuntar de una soia manera en la toma de otra). Como medida de seguridad, se podrà cjavila polarizada (una pata es más ancha que El cable de este aparato está dotado de una

con Corriente Alterna (60 Hz) de 120 voltios Para uso doméstico solamente. Uselo solamente

DE OPERACION INSTRUCCIONES INSTRUCCIONES **GUARDE ESTAS**

de voltaje. 15. No utilice este aparato con un convertidor

enboi oi

aire se vuelve muy caliente durante el uso. No 14. El cuerpo del aparato cerca de la salida de

to. Utilice el mango y los botones o perillas. 13. No todne las partes callentes de este apara-

GETTING STARTED

Hair should be clean and completely dried before using the curling wand. Plug the wand into an electrical outlet. Turn on unit. The Power/Low 285°F setting will become illuminated. Allow unit to heat up for 30 seconds.

WARNING: The curling wand's barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling wand has been turned on.

The wand's unique 5 ultra-high heat temperature settings and Instant Heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting on high. You can vary the wand's temperature according to your particular need!

Temperature Setting Guide

LED TEMP. CONTROL	HAIR TYPE
Power/Low 285°F	Delicate, thin, easy-to-curl hair
Medium 310°F	Average-to-thick or treated hair
Med-High 330°F	Thick or wavy hair
High/Max 360°F - 400°F	Hard-to-curl hair

No utilice una extensión con este aparato.

los y elementos similares. Mantenga las aberturas libres de pelusas, cabelcama o un sota, donde se puedan obstruir. el aparato en una superficie blanda, como una 11. Nunca bloquee las aberturas de aire ni coloque

ficie mientras esté caliente o conectado. 10. No colodue el aparato en ninguna super-

feuda los olos y la piel alejados de las superficies 9. Este aparato se vuelve muy caliente. Manoxideno.

sol (spray) o donde se esté administrando ust qouqe se esteu nasudo broductos en aero-8. No lo utilice en exteriores, ni lo haga funcioaberturas del aparato.

7. Nunca deje caer ni inserte ningún objeto las

dormido/a o adormilado/a. 6. Nunca utilice este aparato mientras esté

alrededor del aparato. calientes. No jale, retuerza ni enrolle el cable

5. Mantenga el cable alejado de superficies para su revisión y reparación. abarato a un centro de servicio autorizado

caido o si estuviese dañado. Regrese el unpiese inncionado mai o que se hubiese clavija estuviesen dañados, después de que 4. No opere este aparato si el cordón o la recomendados por el tabricante.

sednu jas instrucciones. Solo use accesorios bropósito para el cual fue diseñado y solamente 3. Utilice este aparato únicamente con el

o celca de ninos o personas con alguna dis-2. Este aparato no deberia ser usado por, sobre

tras este conectado. 1. Nunca deje el aparato desatendido mien-



TO CURL HAIR

For best results, use a light styling product before blow-drying hair.

Take a 1-inch wide section of hair, starting 2-inches from the scalp.

2 Wind the section of hair around the thicker portion of the barrel towards the cool tip.



Hold the end of the hair in place at the cool tip for 5 to 8 seconds depending on hair type, and then release. No clamp allows you to easily curl hair without kinks. For tighter, bouncier curls, roll less hair. For loose, free flowing curls, roll more hair. To "set" the curl, do not comb or brush hair until it cools.

4 Repeat process on additional sections of hair until you achieve the hair style you desire. Some experience is necessary when learning riesgo de quemaduras, electrocución, incendio

ADVERTENCIA – Para reducir el

inmediatamente. No toque el agua.

5. Si el aparato cayera al agua, desconectelo

u orro ilquido. 4. No coloque el aparato ni lo deje caer al agua

bnegs cset o set embulsdo a una banera o un 3. No colodne ni guarde este producto donde 2. No lo use en el baño o la ducha.

atamente despues de usarlo.

1. Siempre desconecte el aparato inmediyeriga bor descarga:

apagado. Para reducir el riesgo de muerte o fado permanece bajo tensión, aunque esté PELIGRO — Cualquier aparato enchu-

DEL AGNA MANTENGALO ALEJADO

OJRAZU 30 SETNA INSTRUCCIONES **SAJ SAGOT A3J**

brecauciones básicas de seguridad, entre las mente en la presencia de niños, debe tomar Siempre que use aparatos eléctricos, especial-

SATUATRO MI SEGURIDAD MEDIDAS DE

to use this curling wand. After using several times, you will learn the ideal way to curl and style your hair.

A heat protective glove has been supplied to help protect your left fingers from temporary contact with the barrel when wrapping the hair around the appliance.

Please note that the heat protective glove is only designed to give initial contact protection. Discomfort will be caused with prolonged contact with the hot surface.

Never leave your curling wand on and unattended. However, should you fail to turn the wand off, it will shut itself off automatically within 60 minutes.

USING INSTANT HEAT. THE 5 ULTRA-HIGH HEAT TEMPERATURE SETTINGS

This styling wand features a ceramic heater that maintains constant temperature during use for precision styling.

This Instant Heat technology has 5 ultra-high heat temperature settings. There is a temperature range that's gentle and safe for every type of hair, from the finest to the most resistant, and helps you create the look you want.

UNIFORM HEAT RECOVERY SYSTEM

Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the wand at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

SAVE THESE INSTRUCTIONS